

## Fuji FVR - E9S

|   |                               |
|---|-------------------------------|
| Pr 01 Frequency Setting                   | set 1                         |
| Pr 02 Operation method                    | set 1                         |
| Pr 03 Maximum Frequency                   | set ??? Hz (depend on motor)  |
| Pr 04 Base frequency 1                    | set 60Hz                      |
| Pr 05 Rate voltage (output)               | set 220 V                     |
| Pr 06 Acceleration time 1                 | set 3                         |
| Pr 07 Deceleration time 1                 | set 3                         |
| Pr 08 Torque boost 1                      | set 0                         |
| Pr 09 FMA voltage adjustment              | set 99                        |
| Pr 10 Motor poles                         | set 4                         |
| Pr 16 Electronic Thermal overload relay 1 | set ???Amp (depend on motor)  |
| Pr 36 Frequency limiter / High            | set ???Hz (depend on motor)   |
| Pr 71 Motor 1 / rated current             | set ??? Amp (depend on motor) |