


4.3 Foundation

(a) With special torque-resistant capability at the base, this machine requires no particular foundation. Only provide 15cm thick of concrete on the floor and leave space for components adjustment for leveling. (Refer to figure 5) for foundation diagram.

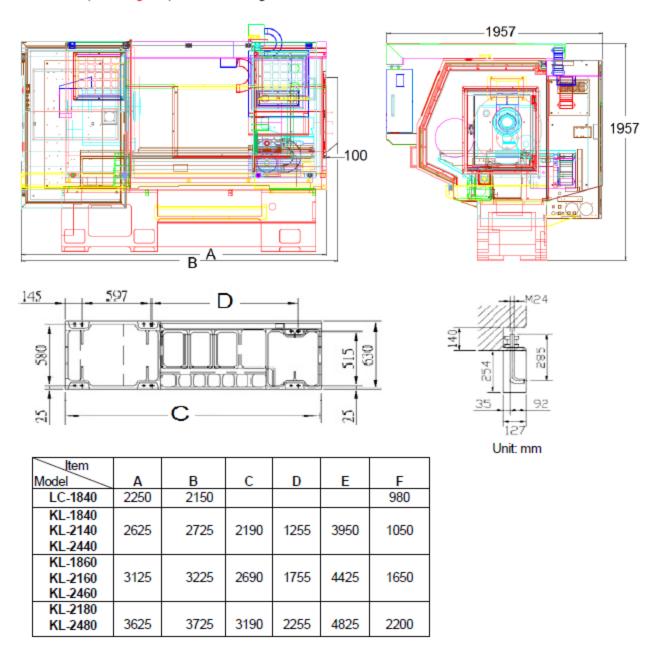

Note: Do not use wood foundation since its nature of unstable so that the machine may move gradually. Install the machine on the first or second floor. Take the stress of ceiling and foundation into careful consideration to see if machine load can be set safely.

Rev. Sep 2014