

How to replace the battery mother board for M400i

Turn off the computer.

Unplug the computer.

Remove the console, the side cover.


Remove old battery with fingernail or use non-conductive small screwdriver.

Install new battery.

Replace side cover.

Plug back in.




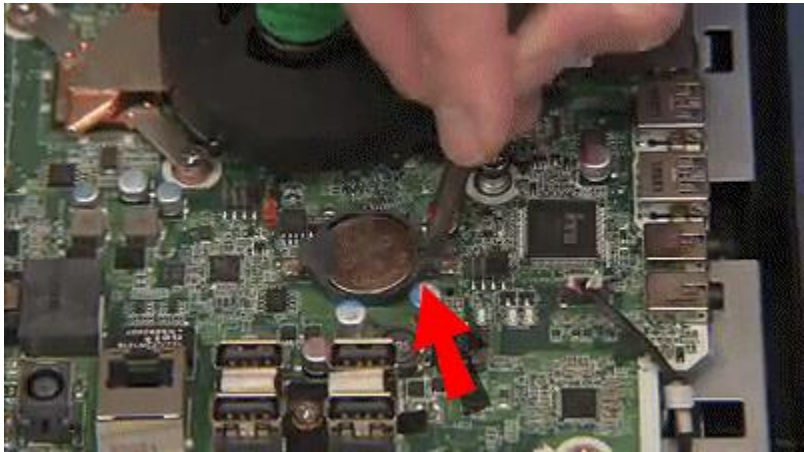


Turn computer on.


Press Delete go to Bios.

1.Using arrow key high light [Save and Exit] -----Restore Defaults -----Yes -----F10 Save and exit

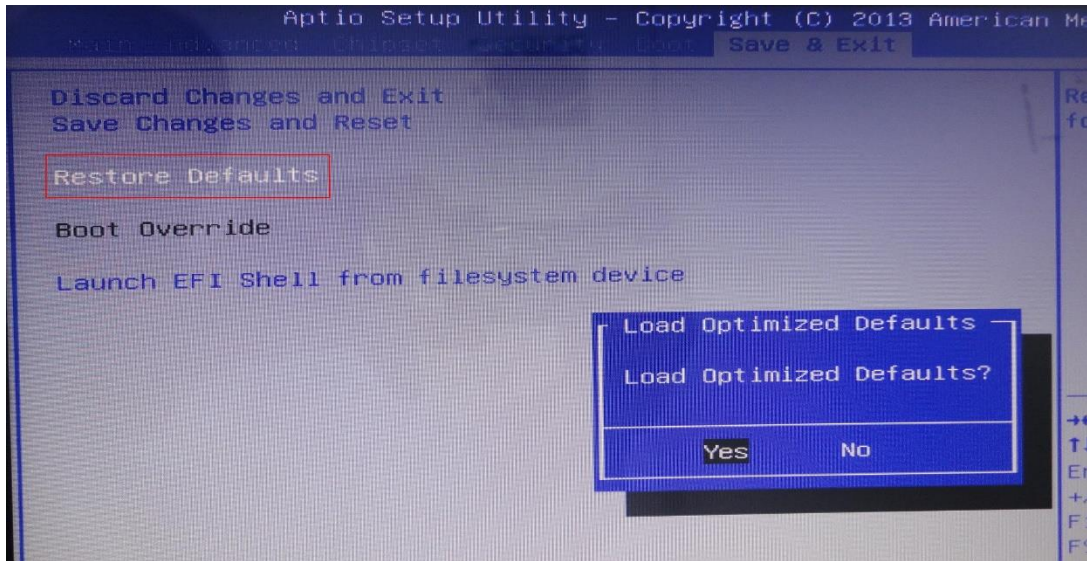

2. Advanced-----ACPI Setting -----Restore AC power loss -----power On -----F10 SAVE

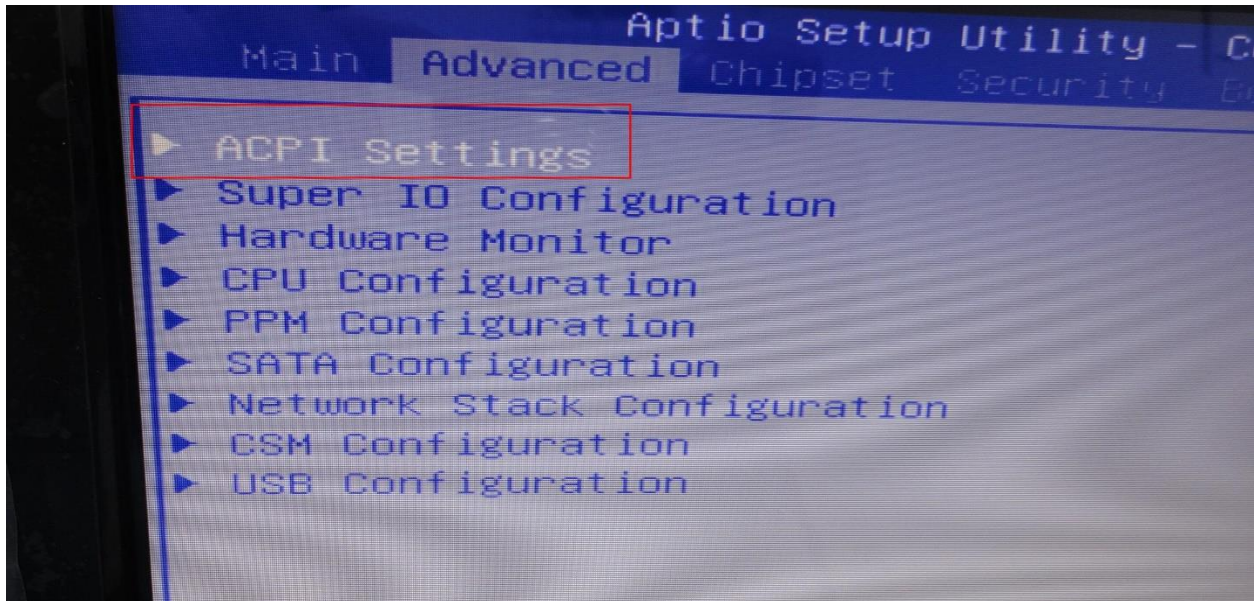

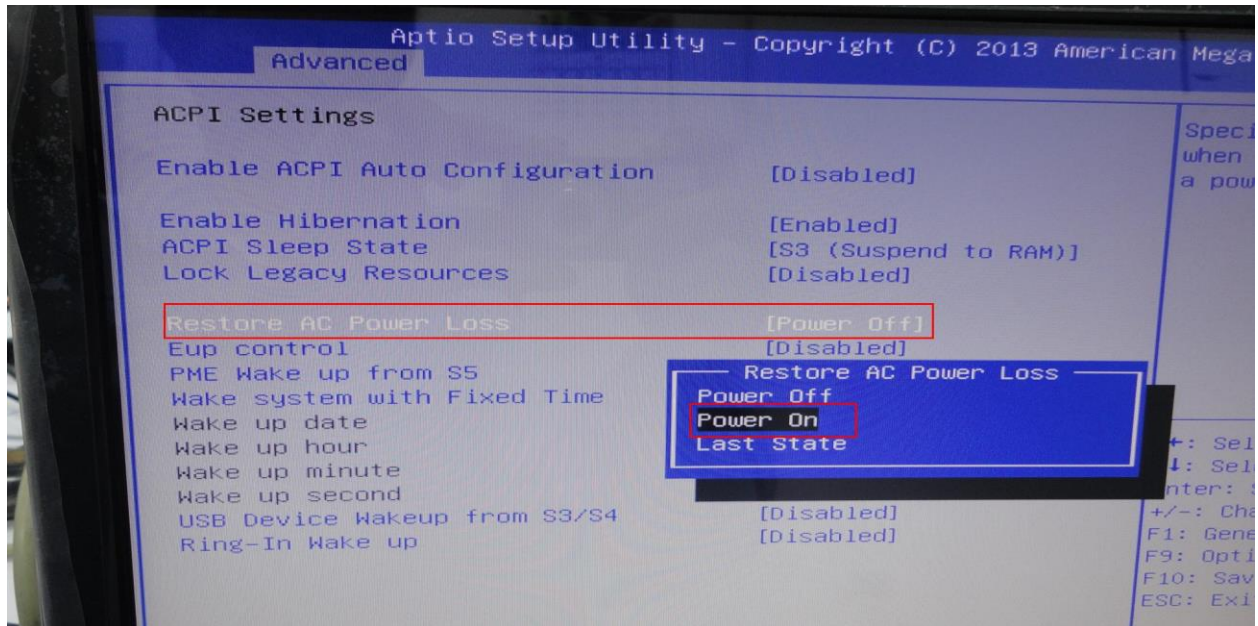

3. Main -----change time and Date -----F10 Save