

## Spindle air ventilator

Purpose: To prevent the moisture to get in the spindle.

Adjust air flow spindle: just have some air gos out from spindle, don't need so noises.

