

How to Set Software limit

Parameter	Item
2401	X pos. coordinate of stroke limit 1 (BLU)
2402	X neg. coordinate of stroke limit 1 (BLU)
2405	Z pos. coordinate of stroke limit 1 (BLU)
2406	Z neg. coordinate of stroke limit 1 (BLU)

Inch*25400 = Value

Example:

X: 30 inch*25400 = 762000

Z: 17.24 inch*25400 = 438100