



TY30-VS

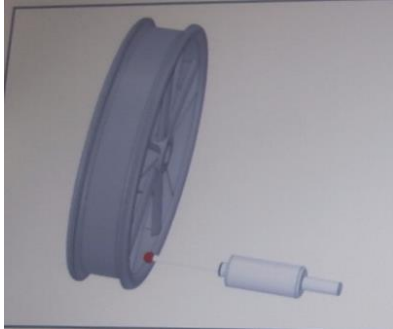


Digitizing.

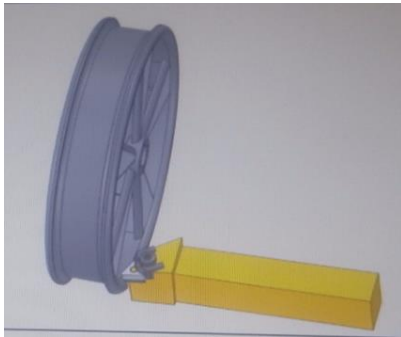

Cutting Wheel.




Manual – Auto.

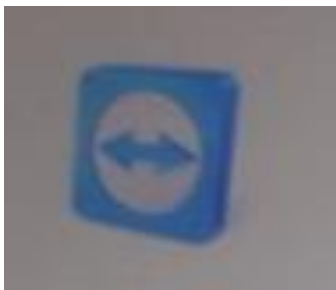

TeamViewer (Need Internet connection) for troubleshooting.



Select Auto/ manual Spindle.

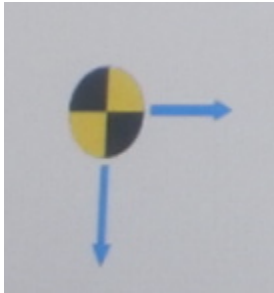

Machine Home (Z and X zero position).



Air on / Off.




Home Page.



Work Light.




Fast / Slow

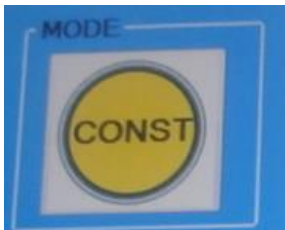

Continue / Incremental.




Increment.

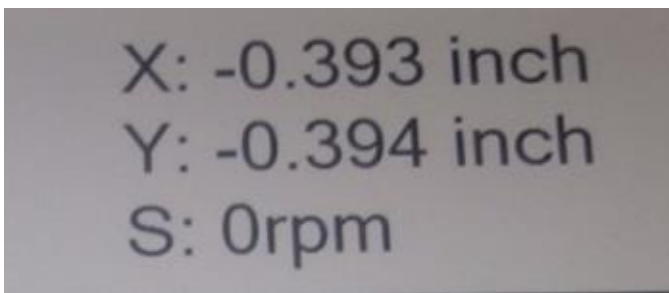

DRO display and spindle RPM




Using USB for transfer file.

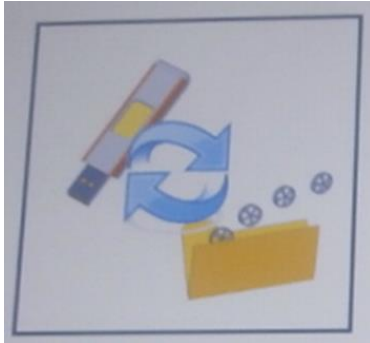

Copy Files between control and external USB.

Copy program from control to external USB

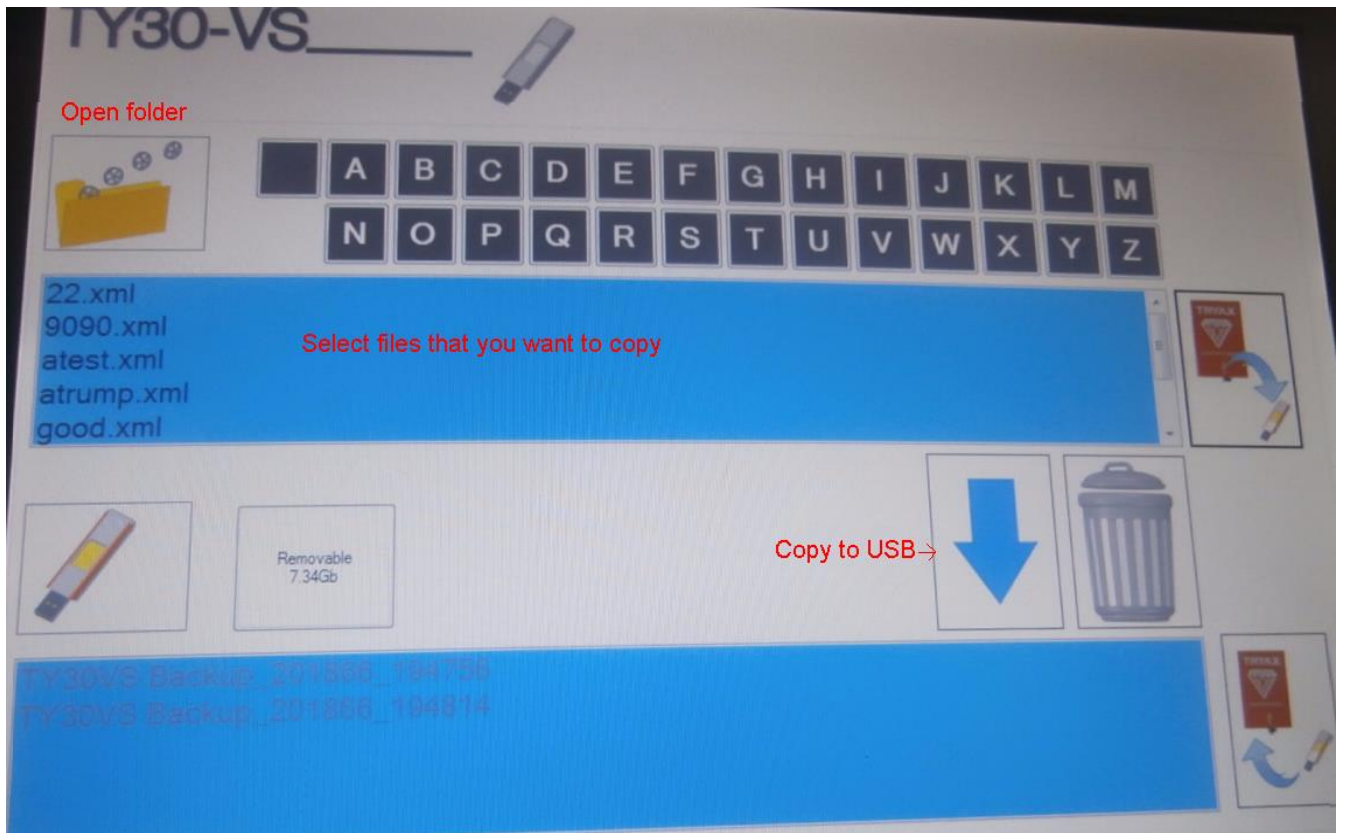

Copy file from USB to control.

